

ATV Flail Mower




Assembly Manual

(Please note that engine oil must be added before using the machine)




(I).Open the package and find out follow parts.


No.	Pictures	Description	Qty.
1		Body	1
2		Wheels accessories	2
3		Crossbeam	1
4		Spring	2
5		Height adjust handle	1
6		Protective rack	2

7		Tow bar accessories	1
8		Tow bar adjusting	1
9		Bolts and nuts	1pkg


(II).Start assembly flail mower.

Step 1: Install crossbeam.

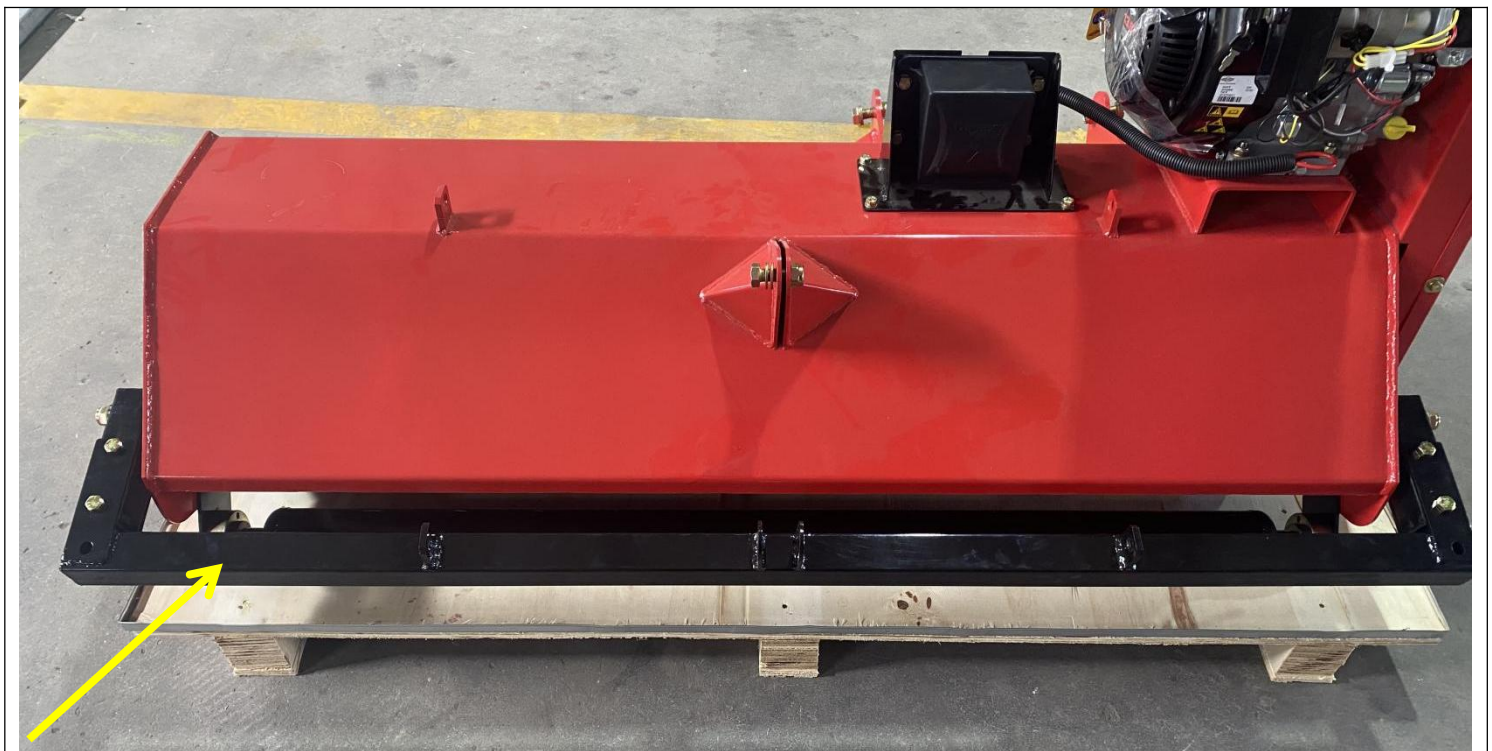

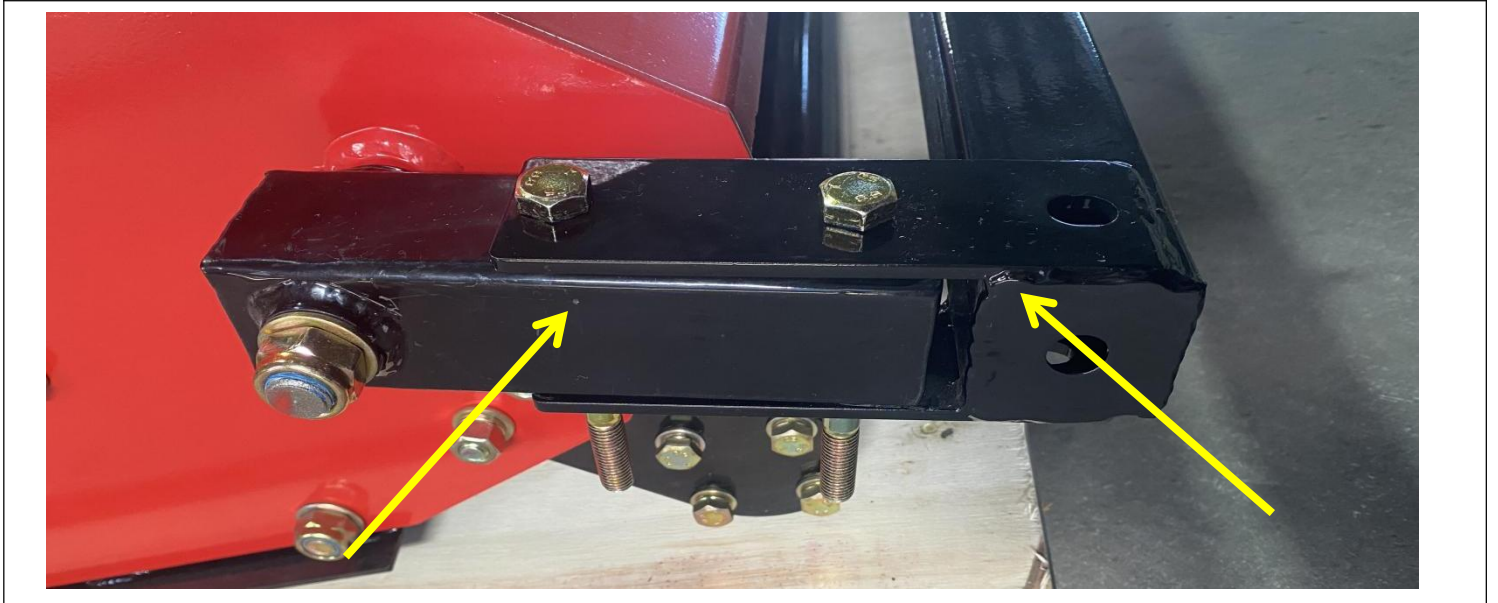


Step 2: Install Wheels accessories.

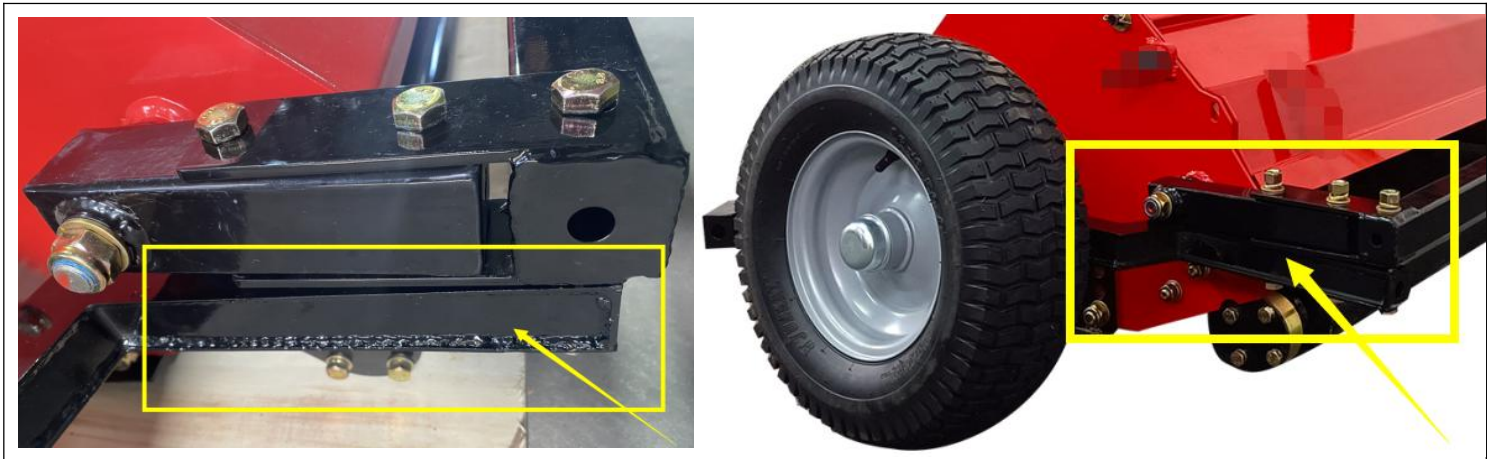


Step 3: Install height adjust handle.

1.remove bolts from mower main body and crossbeam;

2. install height adjust handle use those bolts.

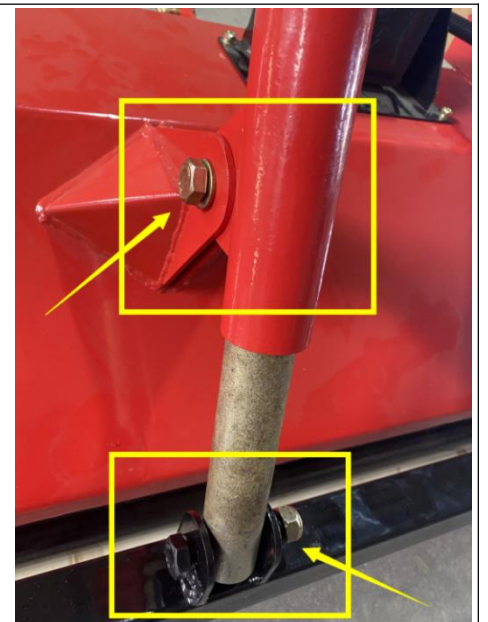


Step 4: Install 2pcs spring.

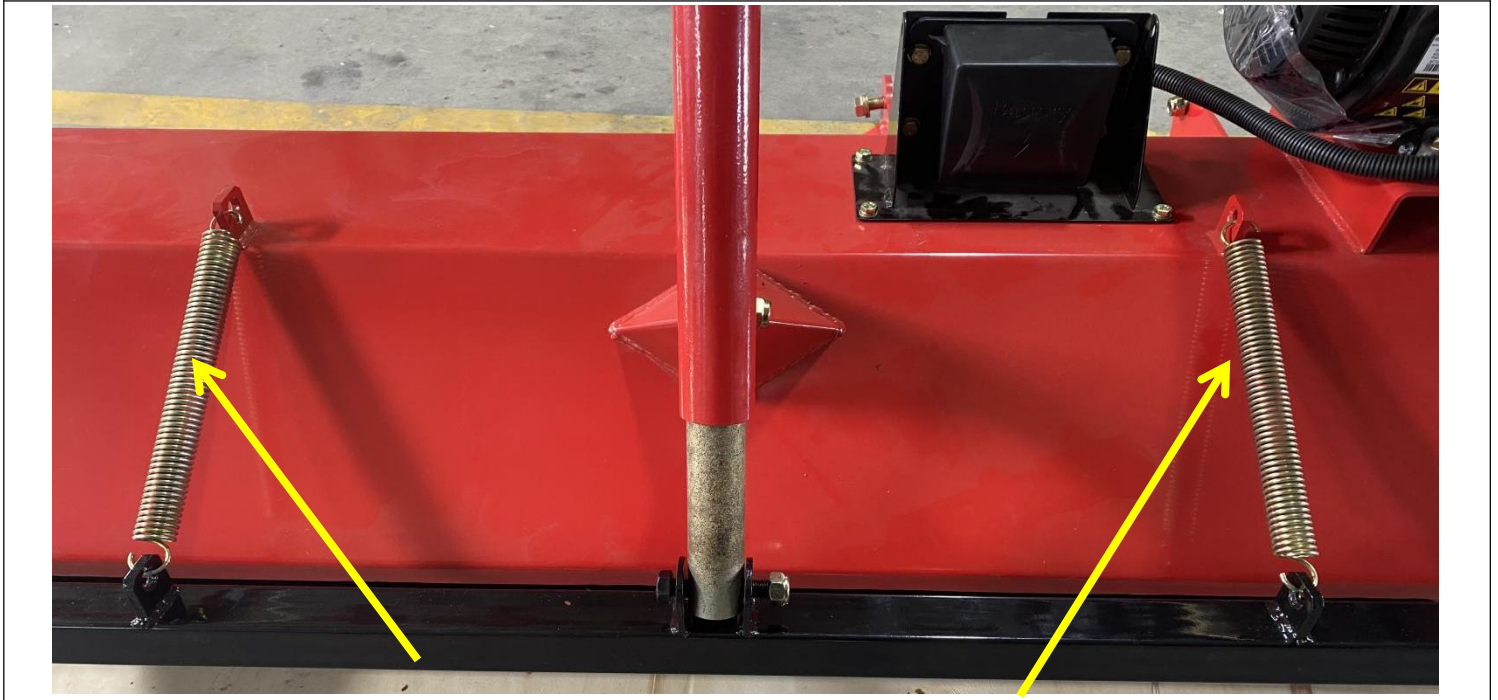

Step 5: Install 2pcs protective rack.


1. remove bolts from protective rack;

2.install protective rack use those bolts.

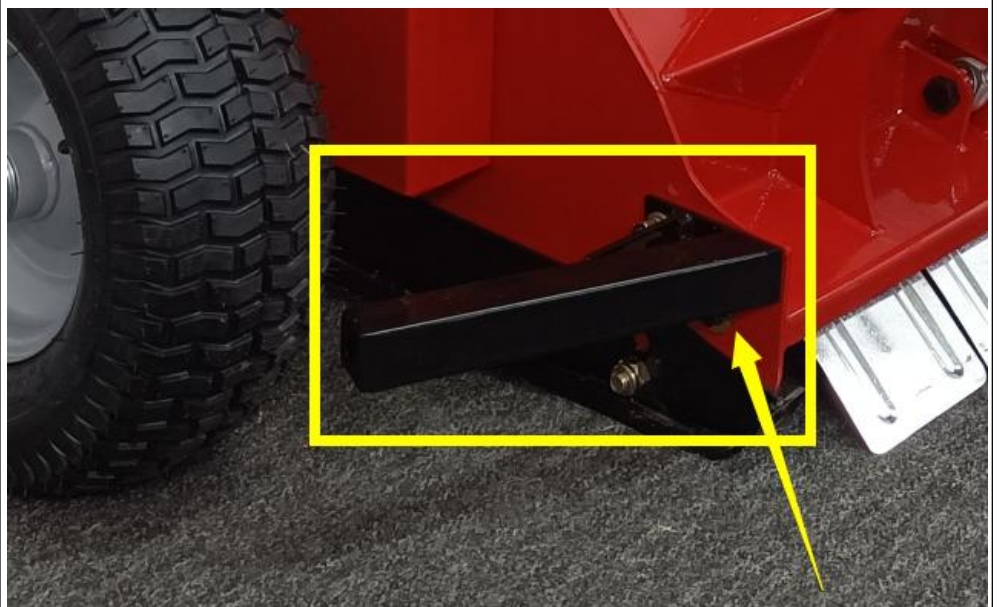

Step 6: Install Tow bar accessories.


- 1.remove bolts from mower main body;**
- 2.install tow bar accessories use those bolts;**
- 3.install tow bar adjusting use those bolts.**

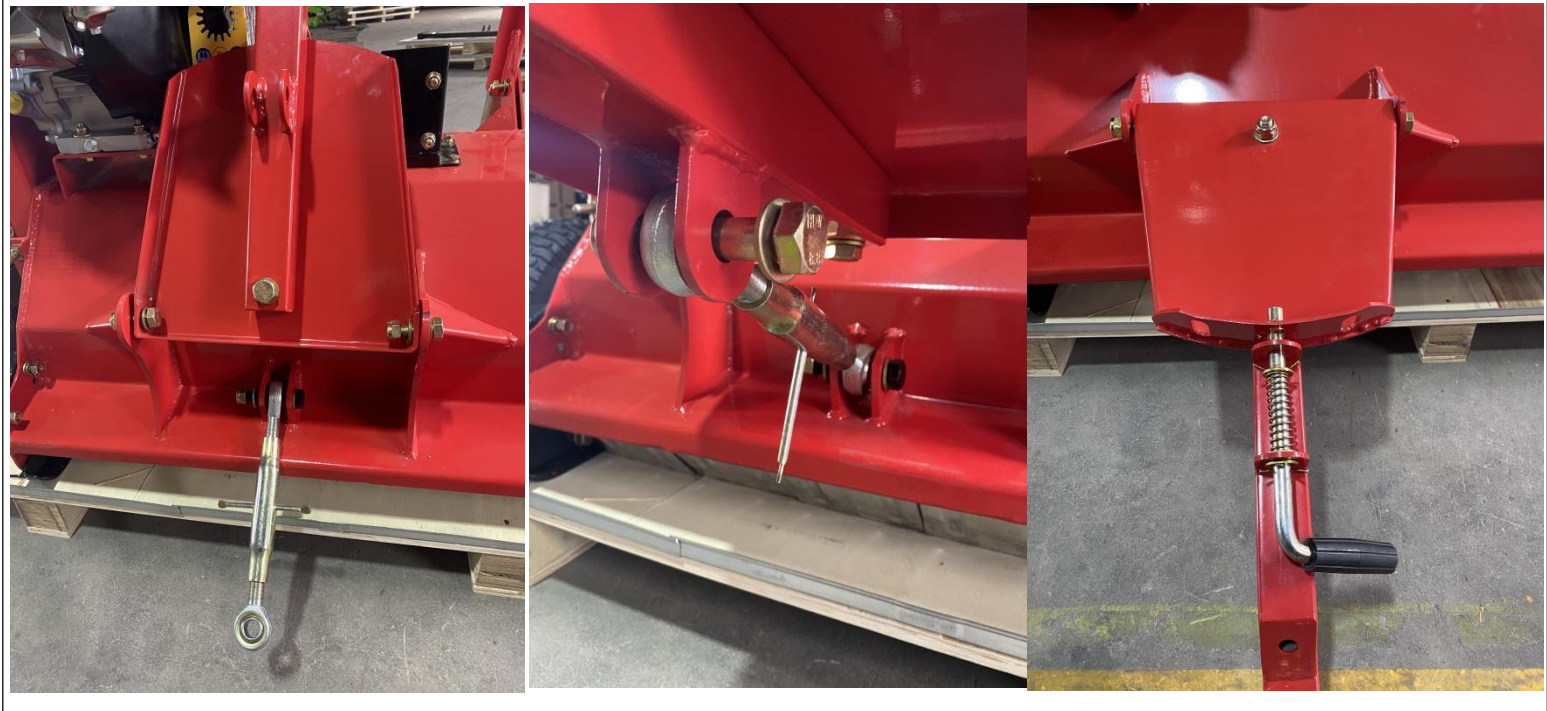

Step 7: Install battery “+” red wire to engine start motor.

1.remove insulating plastic tape from battery red wire;

2.remove the nut from engine start motor to connect battery “+” red wire.

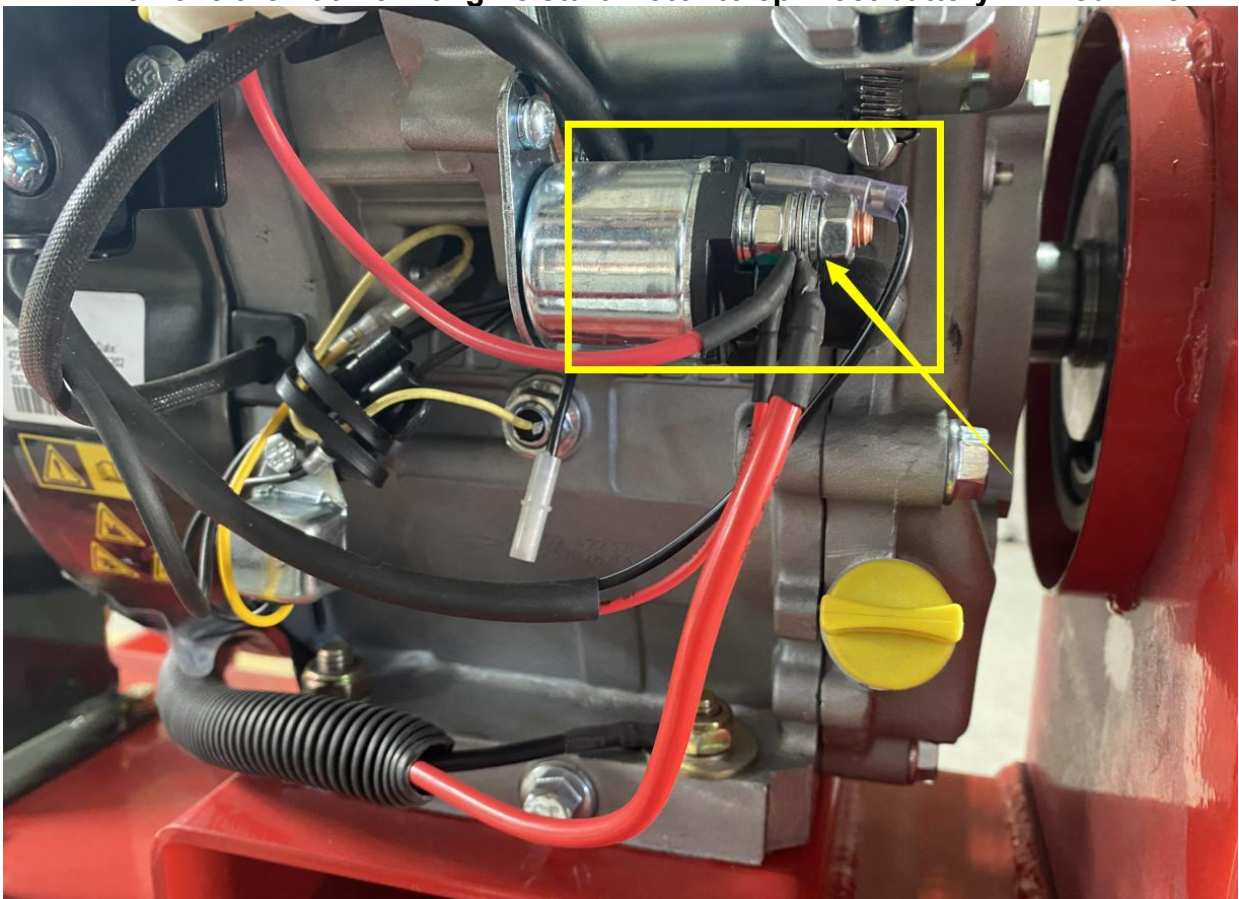

(III):Finished assembly.

